

# Update Firmware

You can update the firmware for the Olympus E-System body, lens, and flash (if applicable) using an internet access connection.

**For details on camera mode operations and connecting the camera to the computer or removing the camera from the computer, refer to “Starting OLYMPUS Studio/Viewer” in the OLYMPUS Studio/Viewer instruction manual.**

Use a fully charged battery or the optional AC adapter as the camera’s power source.

- 1 Turn on the camera and set [PC Mode] of the camera to [CONTROL].**
- 2 Connect the camera to the computer with a USB or IEEE1394 (FireWire) cable.**
- 3 Select [Update Firmware] from the [Help] menu in the browse window.**


A confirmation message is displayed.

With OLYMPUS Studio, [Update Firmware] can be selected from the [Help] menus in the image edit window or camera control window.

- 4 Confirm the confirmation message and click the [Yes] button.**

The [Update Firmware] dialog box is displayed and the current version of the connected device is shown in the [Selecting device] list.

## [Update Firmware] dialog box - before checking the latest version

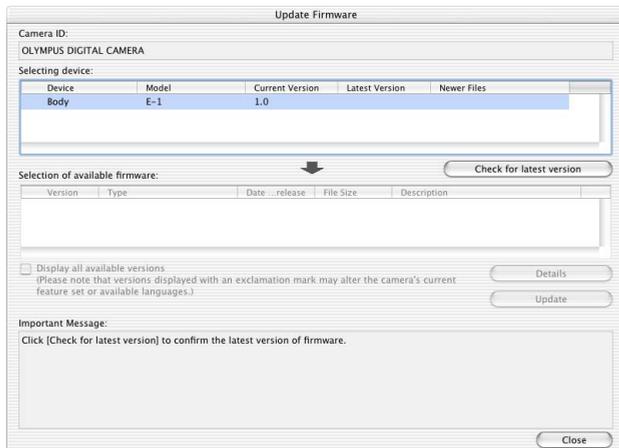



Tips

- The [Online User Registration] dialog box is displayed when user registration has not been completed for the connected camera.



- When the [Yes] button is clicked, the web browser starts and the user registration page is displayed.
- When the [No] button is clicked, user registration is skipped.



Note


- Device not compatible with firmware update will not be displayed on the [Selecting device] list. (You may be able to update if the firmware of the body is updated.)
- When multiple lens accessories (teleconverter, etc.) are attached, lens and accessories may not be displayed on the [Selecting device] list.

## 5 Click the [Check for latest version] button.

The server is accessed and the latest version of each device is displayed in the [Selecting device] list.

Devices with later versions available are displayed with the [↑] icon on the left.

### [Update Firmware] dialog box - after checking the latest version

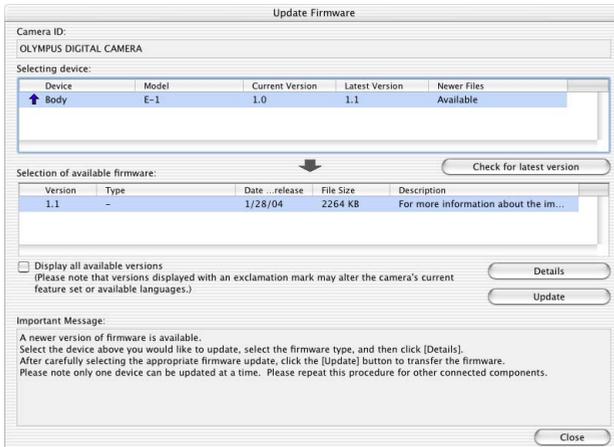

## 6 Select the device to update from the [Selecting device] list.

The [Selection of available firmware] list varies according to the device selected.

## 7 Select the applicable firmware from the [Selection of available firmware] list.

When the [Details] button is clicked, the web browser starts and the details page for the selected firmware is displayed.



- When [Display all available versions] is checked, other applicable versions of firmware on the server are also displayed. These are displayed with an exclamation mark on the left. (Please note that these versions may alter the camera's current feature set or available languages.)


## 8 Click the [Update] button.

After the confirmation message and [Software License Agreement] dialog box are displayed, the firmware is downloaded and transferred to the camera.

## 9 After “The firmware has been transferred successfully” is displayed, follow the on-screen instructions and unplug the USB/IEEE1394 (FireWire) connection cable from the camera.

Once disconnected, the firmware update will begin automatically.

### [Update Firmware] dialog box - updating

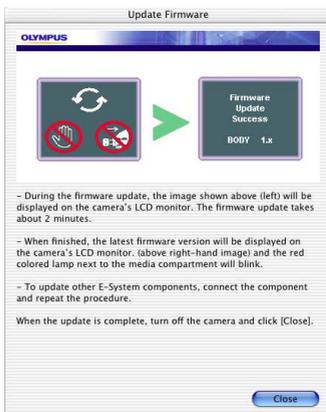

**Do not interrupt the camera's power source, or press any buttons during the update!**

When the update is complete, the new firmware version is displayed on the camera's monitor.

**10** Upon completion of the update, follow the on-screen instructions to turn off the camera and click the [Close] button.